


UVL® Lifts

The UVL®, or Under Vehicle Lift®, offers an innovative solution to your personal mobility. With the lift mounted underneath the vehicle, it remains out of sight and out of your way until needed. This means easy access, a clear side view and maximum interior space—something your friends and family will appreciate on every trip.

The BraunAbility UVL® Series lifts are electric in operation for both the in/out cycle and the outboard roll stop. The up/down cycle is hydraulic in operation. All functions are controlled by the standard hand-held control or the optional remote control.

The UVL® Series is designed for installation at the side door of domestic full-size vans. Installation of the UVL requires modification to the van's drive shaft—consult your BraunAbility Dealer for details.

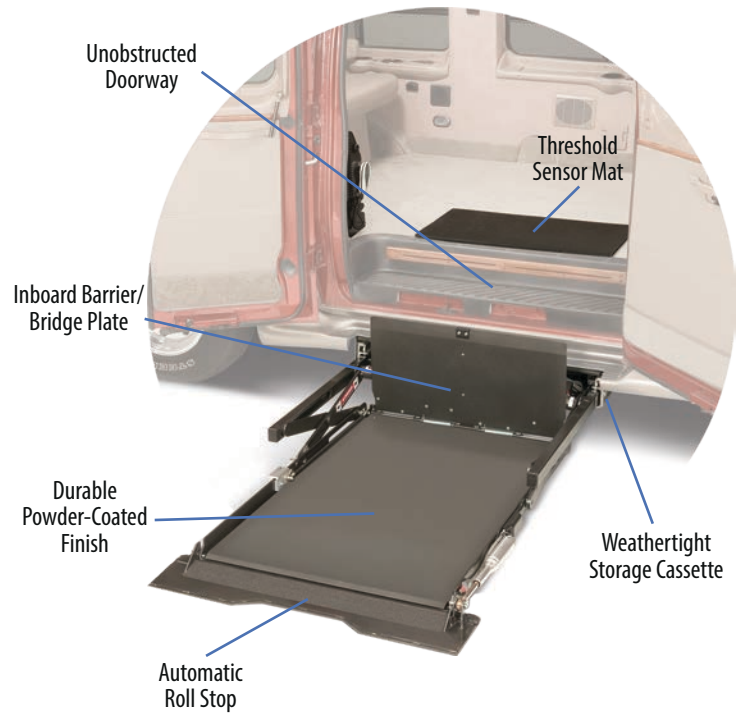

Under-Vehicle Storage for Maximum Interior Space



UVL® Series	NUVL603C	NUVL855C
Platform Width	31"	30"
Platform Length	48"	53"
Lifting Capacity	750 lbs.	750 lbs.
Hand-Held Control	Standard	Standard
Manual Backup	Standard	Standard
Remote Control	Optional	Optional
Door Operators	Optional	Optional
Side-Entry Platform	No	No
Side Door Installation	Yes	Yes
Rear Door Installation	No	No
Unit Weight	500 lbs.	632 lbs.



1-800-THE-LIFT® • 1-800-843-5438

All illustrations, descriptions and specifications in this brochure are based on the latest product information at the time of publication. BraunAbility reserves the right to make changes at any time without notice. © 2019 BraunAbility